
FEATURES

- 1/4 turn washerless ceramic disc valve cartridges
- Flow rate 12 gpm (45 lpm) at 45 psi (tub)
- Flow rate 2.5 gpm (9.46 lpm) at 45 psi (hand shower)
- Solid brass construction
- Warranty:
 - Limited lifetime warranty (residential use)
 - One year (commercial use)

- Standard finishes:
 - o antique bronze
- Listed by IAPMO, CSA, NSF, and other municipalities
- Shipping weight (lbs.) 30
- Shipping dimensions (in.): 23 x 13 x18

Note: some building codes require remote pressure balance valves (not supplied) for anti-scald

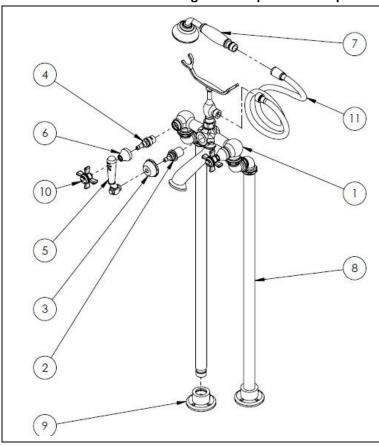

	700	
NO.	PART NUMBER	QTY.
1	321-5.2-BODY	1
2	321-5.2-DVRTR-CRT	1
3	321-5.2-DVRTR-HNDL-ESC-NUT	1
4	CRT502-(C/H)	2
5	321-5.2-DVRTR-HNDL	1
6	321-5.2-HNDL-ESC	2
7	321-5.2-HND-SHWR	1
8	SS-RIS110-ELT-PIPE	2
9	RIS-110-FLNG	2
10	\$1-HNDL-(COLD/HOT)	2
11	DS-4079	1

For technical support, please call 1-888-779-5176


- 1. Carefully remove all parts from the box.
- 2. Begin by first installing your coupling
 - a. You need to provide two 3/4" female NPT couplings
 - **b.** Make sure that the coupling is flush to the finished foor.

Note: Coupling may be recessed a little from the finish floor but *never* to protrude higher than the surface of the finished floor. This will prevent the decorative flanges (9) from sitting flush on the finished floor.

- 3. Screw decorative flange (9) onto risers (8).
 - a. Ensure flange is threaded all the way up onto tapered side of 3/4' riser.

Note: One end of riser is tapered and one side is straight thread.

- 4. Screw risers (8) securely into 3/4" female NPT couplings (not provided).
- 5. Thread flanges (9) down to finished floor and secure with finished screws provided.
- 6. Mount tub faucet (1) onto risers.

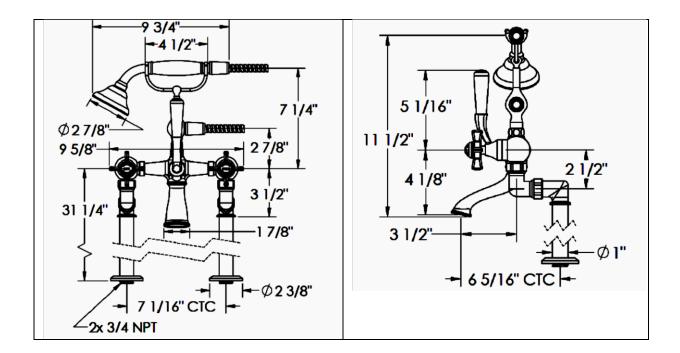

IMPORTANT INSTALLATION INFORMATION

- USE TEFLON TAPE OR PIPE SEALANT FOR THREADED CONNECTIONS
- DO NOT USE PLUMBER'S PUTTY ON ANY OF THE BRASS COMPONENTS
 This will cause the finish to tarnish and void the warranty. A non-corrosive Silicone is recommended.
- DURING SWEATING OF LINES DO NOT OVERHEAT CASTING
 Overheating may cause damage to internal mechanism
- COPPER ADAPTORS MAY BE REQUIRED TO COMPLETE YOUR INSTALLATION