P O T T E R Y B A R N

floor standing frame carousel

The frame carousel is ideal for holding postcards and $4" \times 6"$ photo.

To use:

Two people recommended for safety and ease of assembling. Insert the center pole into the base. Tighten the center pole in clockwise direction.

Care instruction:

Wipe with a soft, dry cloth only. Avoid cleaners and abrasives as they may damage the finish.

thank you for your purchase

