

P O T T E R Y B A R N

Charleston Clock

Instructions

To install battery:

Batteries are not included. Open the back of the clock.

Insert a new 1.5 volt "AA" battery. Match the battery direction to the polarity markings displayed inside the compartment. Movement should start immediately.

Should clock fail to function properly or the alarm sound becomes "fuzzy", replace with a new battery and assure that it is correctly positioned in the battery compartment.

Remove battery if clock is to be stored.

To set time:

The TIME SET dial is located at the back of the clock. Turn this dial counter clockwise until correct time is reached. Do not touch or move hands of clock manually.

To set alarm:

Turn the ALARM SET dial counter clockwise as indicated by the arrow until the alarm hand indicates the desired alarm time. To activate the alarm, the button at the top must be in the upright position. To turn off the alarm, press the button down.

Care Instructions:

Clean clock with a soft, dry cloth. Do not use solvents or abrasive cleaners on clock as they may damage the lacquered finish.

To avoid explosion or leakage, do not dispose of batteries in a fire or attempt to recharge standard or alkaline batteries. Please dispose of batteries safely according to the battery manufacturers instructions or recycle battery per state and local codes. If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with plenty of water. Batteries should be handled under adult supervision. If the device is not to be used for a long period of time, remove the battery to prevent or injury from possible battery leakage.

thank you for your purchase