

P O T T E R Y B A R N

Fairmont Glass Crackle Lamp Base

Important Safety Instructions:

- This portable luminary has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.
- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly of this lighting fixture.
- This fixture has been rated for up to (1) 60-Watt maximum Type A standard incandescent light bulbs (not included) or 13-Watt compact fluorescent bulb. To avoid the risk of fire, do not exceed the recommended lamp wattage.
- NOTE: For your safety, if using shades, use only those with a minimum opening diameter and minimum lamp-to-shade spacing meeting the measurements specified in the Alternate Shade Specification included with these instructions.
- **SAVE THESE INSTRUCTIONS**

WARNING:

- **To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool prior to replacing the light bulb.**
- **Do not touch bulb when fixture is turned on; do not look directly at a lit bulb.**
- **Keep flammable materials away from lit bulb.**

Pre-assembly:

- For your safety and convenience, assembly by two people is recommended.
- Remove all parts and hardware from box along with any plastic protective packaging. Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Parts enclosed:


- 1) Glass Lamp Base (A)
- 2) Metal Cap (B)
- 3) Saddle (C)
- 4) Socket (D)
- 5) Harp (E)
- 6) Finial (F)
- 7) Harp Caps (G)
- 8) Shade (H)

To Assemble:

1. Insert Metal Cap (B) into the top of Glass Lamp Base (A)
2. Press the sides of Harp (E) in order to slide it into the Saddle (C) slots. Lower the Harp Caps (G) onto the Saddle (C) to fix it into place.
3. Unscrew the Finial (F) from the Harp (E) and place the Shade (H) (included) onto the Harp (E). Screw the Finial (F) back onto the Harp (E).
4. Install **(1) 60-Watt Type A** bulb (not included) or 13-Watt compact fluorescent bulb into the socket (D).
5. Plug into proper electrical outlet and test the lamp.
6. Assembly is complete.

Care Instructions:

- Wipe with a soft dry cloth only.
- Always avoid the use of harsh chemicals or abrasives as they may damage the finish.

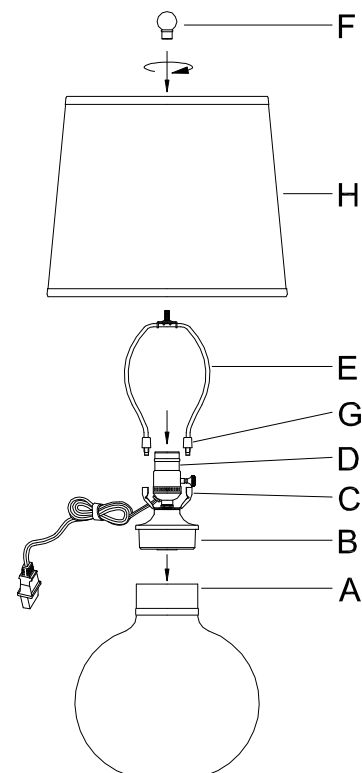

thank you for your purchase

stores | catalog | www.potterybarn.com