POTTERYBARN

Vaughn Swing Arm Table Lamp Assembly Instructions

Important Safety Instructions:

- For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- These instructions are provided for your safety. It is important that they are read carefully and completely before assembling fixture.
- This fixture has been rated for up to (1) 60-watt maximum TYPE T standard bulb (not included). To avoid the risk of fire, do not exceed the recommended wattage.

Warning:

- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

Pre-assembly:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Parts Enclosed:

- (1) Lamp base (A)
- (1) Swing arm with shade (B)
- (1) Cord with plug (C)
- (1) Protective plug cover (D)

To Assemble:

- 1. Insert bulb (not included) into threaded socket.
- 2. Remove red protective plug cover (D) from plug (C).
- 3. Plug into proper electrical outlet and test fixture.
- 4. Assembly is complete.

Adjustment Instructions:

Hold lamp base (A) steadily. Swing lamp arm with shade (B) to desired position.

Care Instructions:

- Wipe with soft dry cloth only
- Always avoid the use of harsh chemicals or abrasives as they may damage the finish

thank you for your purchase

stores I catalog I www.potterybarn.com

