

P O T T E R Y B A R N

2ft smart speaker shelf instructions

WARNING:

- Electrical shock hazard may cause death or serious injury.
- Do not operate Speaker using AC adapter near water. AC adapter is meant for Indoor Use Only. Always plug adapter into Speaker before plugging into outlet.
- This power unit is intended to be correctly orientated in a vertical or floor mount position
- Excessive exposure to audio equipment at high volume may lead to hearing loss.

CAUTION: To reduce the risk of electric shock and fire, do not open any section on the Speaker Shelf. There are no user serviceable parts inside.

Accessories Included:

- (1) Stereo Cord - (A)
- (1) AC Adapter - (B)

Operating Instructions:


1. Make sure Speaker is turned off (rotate On/Off/Volume dial all the way to the left).
2. Insert small end of the enclosed AC adapter into Adapter Input port (see illustration above).
3. Plug other end of adapter into an AC power source (standard wall outlet). NOTE: Use only power adapters with the following specifications: Input: 120 VAC 60 Hz; Output: DC 12V 600 mA; UL and CUL listed.
4. Plug the input connector end of the Stereo Cord into the input jack on the inner right of speaker shelf
5. Turn the speaker on by rotating the volume control and ensure it is set at a low level.
6. Play music using the MP3's controls and adjust the volume either by using the Speaker Shelf's volume control (rotating the dial to the right increases the volume) or your MP3 player's volume control. (NOTE: you may need to experiment to find the right volume setting for the MP3 player and/or the speaker shelf.)

Maintenance and Repair

If a problem occurs while using this product, please contact us at 1-800-922-9934. DO NOT open unit or attempt to repair on your own.

Care Instructions:

- Dust with a soft, dry cloth.
- Do not use glass cleaner, abrasives, wax or household cleaners as they may damage the finish on the product

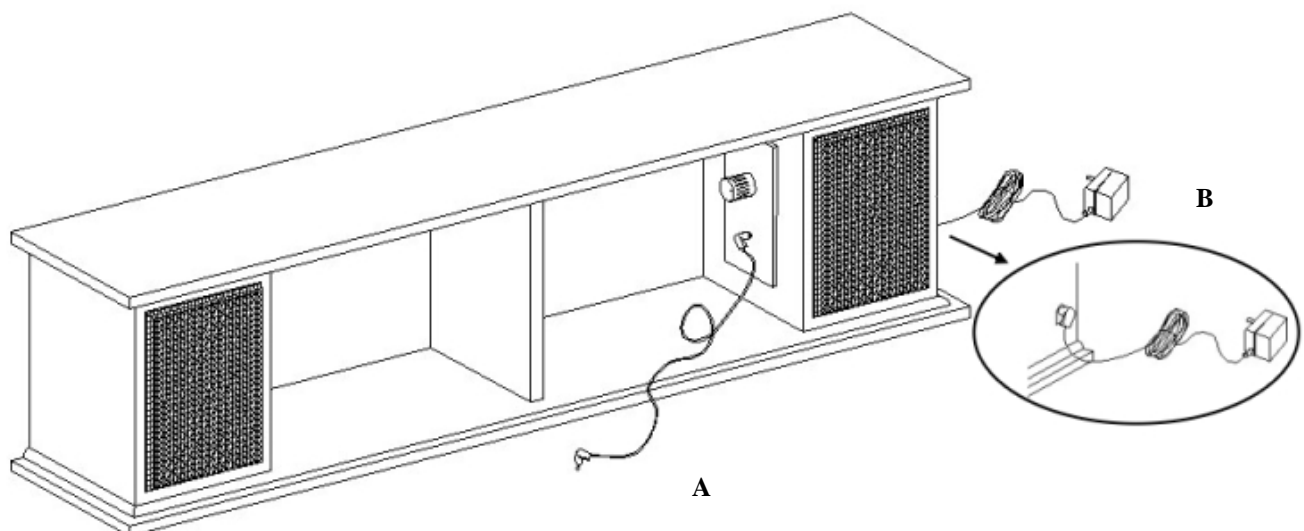

thank you for your purchase
store | catalog | www.potterybarn.com