

# POTTERY BARN

## Laundry Drying Rack

### Mounting Instructions

**Hardware Included:** (4) Anchors  
(4) Screws


**Tools Needed:** Screwdriver, Pencil,  
Level, Stud-Finder

The hardware included with this item is meant for drywall or stud mounting only. If your wall is made from another material such as concrete or plaster, please consult your local hardware store for assistance in selecting the correct hardware.


**Maximum total weight capacity for this product is 15 pounds (6.8 kg).**

#### Mounting Instructions:

1. With the help of another person, hold the item upright and against a wall at a desired location so that the rear side of the product touches the wall directly. Use a level to ensure that the item is being held level and then use a pencil immediately mark the wall through the two keyholes (mark at the upper position of the key notch as the illustration shown) and the two fixing holes (mark at the center). Set the rack aside. The remaining marks on the wall are the insertions for the mounting hardware.
2. The provided anchors cannot penetrate wood studs. Therefore we have to find out if either mark of Step (1) happens to align with a wall stud (use a stud finder to determine this). If either does, do not use the anchor at that mark – use the provided screw directly. Refer to Step (4) & Step (6) about the screw installations.
3. For marks that do not align with a wall stud, install an anchor at each mark first. To do this, use a Phillips screwdriver to engage an anchor, position the anchor tip against the wall at one of the marks and firmly push it into the wall. The anchor will drive itself into the wall when you rotating it clockwise with applying an even pressure. Continue rotating until the anchor's head becomes even with the wall surface. Repeat for other anchors at non-stud marks.
4. At the two upper marks on the wall, use the screwdriver to secure a provided screw into the wall on either an installed anchor or a wall-stud mark. Rotate each screw clockwise until the screw head resides about 3/8" from the wall.
5. Mount the product on the wall by engaging the keyholes with the two protruding screw heads. Make sure it is well secured & supported by the screws.
6. Now extend (pull out) the rods. Use the rest two screws to tie-down the bottom of the product through the two fixing holes. To do this, use the screwdriver to secure a screw through each fixing hole and into the anchors or aligned wall-studs. Rotate the screws clockwise until tight.

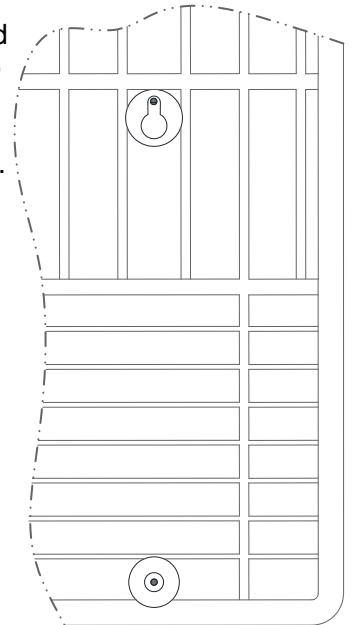

**Care Instructions:** Wipe with a soft, dry cloth. Do not use strong chemical or abrasive cleaners.

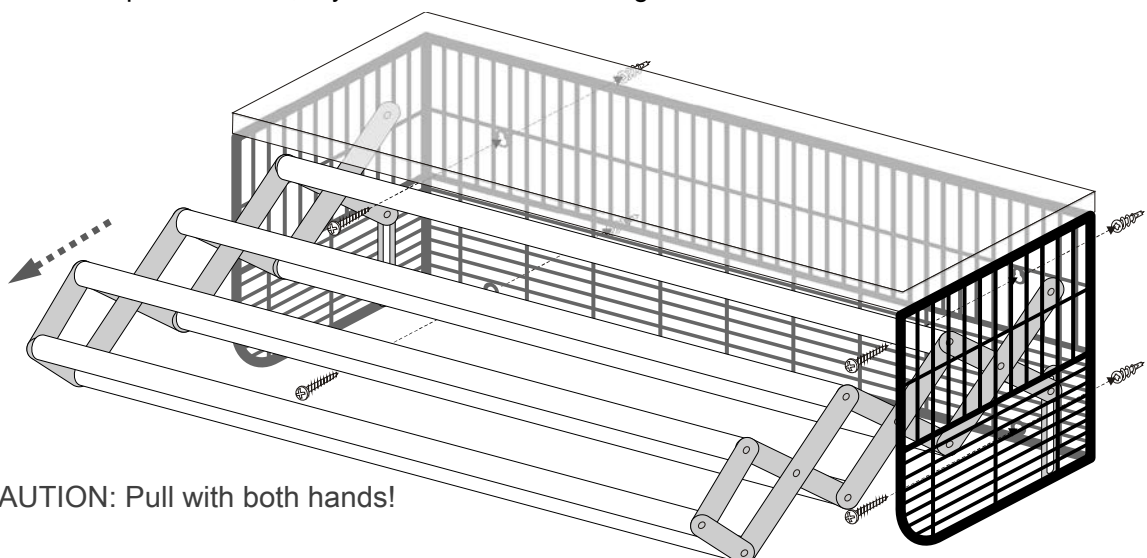

**CAUTION:** Pull with both hands!

**Thank you for your purchase!**  
Stores | catalog | [www.potterybarn.com](http://www.potterybarn.com)