# POTTERYBARN

# Hudson Side Cabinet 08 Mahogany Assembly Instruction

#### Pre-assembly:


- Please read all instructions carefully before assembly.
- For your safety and ease, assembly by two people is recommended
- Carefully lay out and identify all parts and hardware prior to assembly.
- Save all packing materials until assembly is complete to avoid accidentally discarding small parts or hardware

# Parts Included:

• (2) Shelves (A)

### Hardware Enclosed:

• (8) Shelf Pins (B)

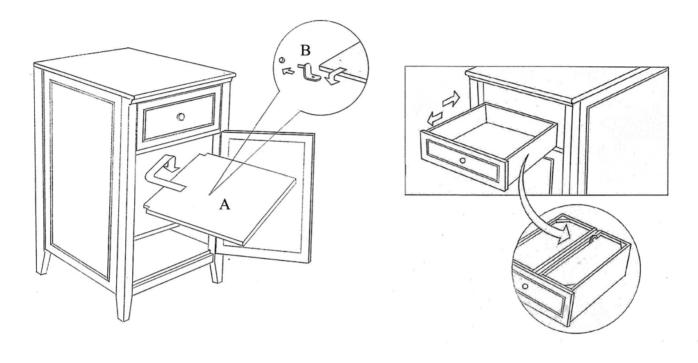

#### Assembly Instructions:

- 1. Řemove shelf pins from the hardware packet. Determine the desired height for the shelves using corresponding holes on the interior of the Side Cabinet as a guide. Push the pins onto the pre-drilled holes until fully inserted. Place the shelf onto the pins making sure they are stable.
- 2. Assembly is complete.

#### Removing Drawer:

- 1. Use the drawer pull to partially open the drawer.
- 2. Grasp the drawer on both sides and pull it straight out to release the drawer stop.

### Care Instructions:

- For daily cleaning, dust with a dry, soft cloth.
- Always avoid the use of chemical and abrasive cleaners.