

P O T T E R Y B A R N

Sofia Hrdwr coil 18 TWB Pol Nik
Assembly Instructions

Note:

For safe mounting, it is essential to use the proper hardware for your wall type. Contact your local hardware store for assistance, if necessary. For safety and ease of mounting, installation is recommended using two people. Mount to wood studs whenever possible.

Tools Needed:

Level, tape measure, stud finder, Philllips screwdriver, pencil

Parts Included:

- 4 Plastic anchors (for dry wall only)
- 4 Metal screws
- 1 Allen wrench
- 1 Coil 18 TWB with pre-attached set screws

Mounting Instruction

1. Pre-assemble Coil 18 TWB. With a pencil, mark on the wall the screw whole location. Remove from wall. These marks will be used to determine the location of your mounting hardware.
2. Use a level or measure up from the floor at each mark to ensure the bar will be level.

Dry Wall Mounting:


1. Use a Philllips screwdriver to insert the plastic anchors. Do not "push" or drive the anchors into the wall, they are designed to bore into the wall like a drill bit. Slowly turn the anchors clockwise while applying pressure until the flange just touches the wall.
Previously installed dry wall plastic anchors and attached Coil 18 TWB onto plastic anchors Secure by turning set screws clockwise with Allen wrench until tight. Then inserting metal screws Tighten screws with a Philllips screwdriver.

Stud Mounting:

Anchors directly into the wall and attached the Coil 18 TWB onto anchor Secure by turning set screws clockwise with Allen wrench until tight then Tighten screws with a Philllips screwdriver.

Care Instructions:

Wipe with a soft, dry cloth. To protect the finish, do not use household cleaners or abrasives.
Maximum total weight capacity for this product is 40 pounds 18.2 Kg (20 pounds 9.1 kg maximum per hook).

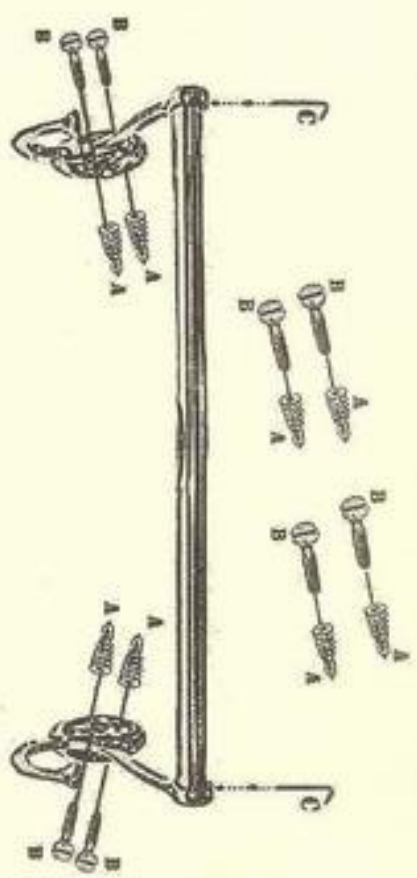

Thank you for your purchase

Stores | catalog | www.potterybarn.com