

P O T T E R Y B A R N

Bench Wright Hardware: TP-Holder

Mounting Instructions

Note: For safe mounting, it is important to use the proper mounting hardware for your wall type. If your walls are made from something other than drywall, be sure to consult your local hardware store to determine the correct hardware for your wall type. Mount to wood studs whenever possible. For stud mounting the anchors are not required - use only the screws.


Part of components: (1) Toilet paper holder (1) Mounting plate
(1) Set screw (Located at the bottom of the holder, to secure the holder to the mounting plate)

Hardware Included: (2) Anchors (2) Screws (1) Allen wrench

Tools Required: Phillips Screwdriver, Pencil, Stud Finder

Mounting and Installation Instructions:

1. Loosen the set screw from the bottom Paper holder to release the mounting plate.
2. Hold the paper holder horizontally at a desired mounting location on wall. Using a pencil, lightly make on the wall for a mounting location along the outline of the bracket of the paper holder.
3. Position the mounting plate against the wall and centered in the circle mark made in step (1). Make sure the two mounting holes of the plate are lined up vertically and then use the pencil immediately to make the wall through the two holes of the mounting plate. These two marks are the insertion points for the mounting hardware. Remove the plate from the wall temporarily.
4. Use a stud-finder to determine if either insertion mark of step (3) happens to align with a wall stud. If so, do not install an anchor at that mark as the provided anchors cannot penetrate wood studs. When instructed to do so below, use the Phillips screwdriver to install the screws through the hole of mounting plate and directly into the wall and stud.
5. For the marks that do not align with a stud, install an anchor first - the anchor is meant to receive the screw after it is installed. To install the anchor, use a Phillips screwdriver to engage an anchor. Position the anchor tip against the wall at the mark and firmly push the anchor into the wall as you rotate it clockwise. The anchor will drive itself into the wall like a large screw. Continue rotating until the wide end of the anchor becomes even with the wall.
6. Reposition the mounting plate on the wall so that the holes of the plate align with either insertion marks or installed anchors. Make sure the sharp projection of the plate is facing away from the wall and then use the screwdriver to install the provided screws through each hole of the plate and directly into the wall or installed anchors. Rotate the screws clockwise until the mounting plate is firmly secured to the wall.
7. Mount the bracket of the paper holder on the wall so that it fits over the installed mounting plate. Hold the paper holder firmly against the wall while you tighten the set screw using the Allen wrench. Rotate the set screw clockwise until tight.
8. The paper holder is now ready for use.

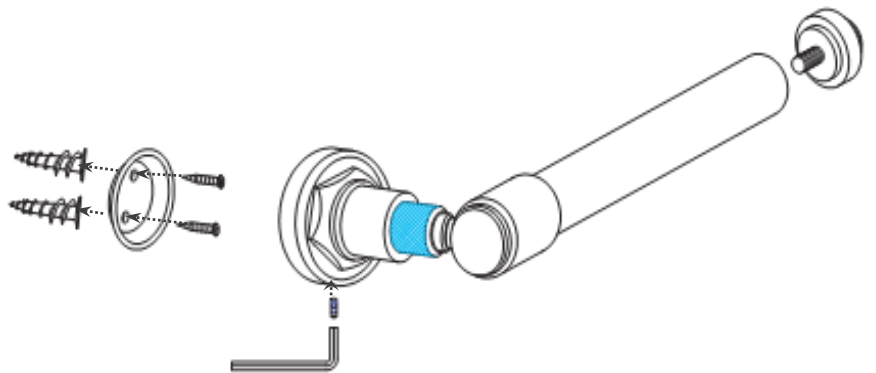

Care Instructions:

Wipe with a soft, dry cloth. To protect the finish, do not use household cleaners or abrasives.