POTTERY BARN

Montgomery Headboard Only

Assembly Instructions

Pre-Assembly:
- Please read all instructions carefully before assembling.
- For your safety, assembly by two people is recommended.
- Save all packing materials until fully assembled to avoid accident ally discarding any hardware.

Parts Enclosed:
- (1) Headboard with 3 pre-drilled holes in each side. (A)

Hardware Enclosed:
- (6) M6 Allen bolt (B)
- (6) M6 Allen nut (C)
- (6) M6 Spring Washer (D)
- (6) M6 Flat Washer (E)
- (2) M4 Allen key (F)

Required for Assembly:
- (1) Pre-assembled bed frame (not included) (G)

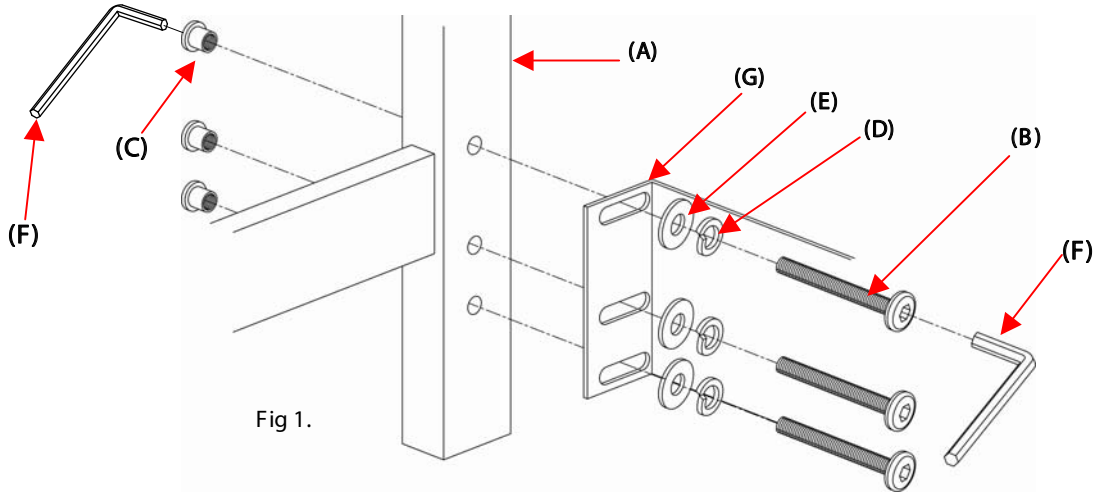


Fig 1.

Assembly Instructions:
1. Align the holes of the bed frame faceplates (G) with the holes found in the sides of the headboard (A). (Fig 1)
2. Insert the bolts (B) through the spring washers (D), flat washers (E), the slots of the bed frame's faceplates (G), the pre-drilled holes in the sides of headboard (A) and into the Allen nut (C) at back of headboard (A). Tighten with Allen key (F).
3. Assembly is complete. Periodically tighten all connections.

Care Instructions:
- Vacuum regularly.
- Over the counter cleaning pr oducts are not recommended.
- Avoid exposure from sun, direct light and heat sources.
- Spot clean only.

thank you for your purchase

stores | catalog | _www. potterybarn. com

Replacing Headboard Fabric



1. Lay headboard face down on a carpeted or scratch-free surface.
2. Remove hardware from back frame with Allen Key as shown in Figure 1.
3. Stand headboard in vertical position and remove panel from headboard frame as shown in Figure 2.
4. Carefully remove fabric from panel as shown in Figure 2.
5. Replace with new fabric.
6. Re-insert panel into headboard frame as shown in Figure 3.
7. Replace hardware as shown in Figure 4.

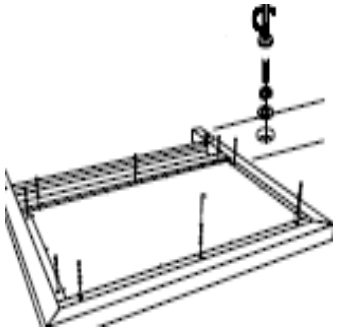


Figure 1

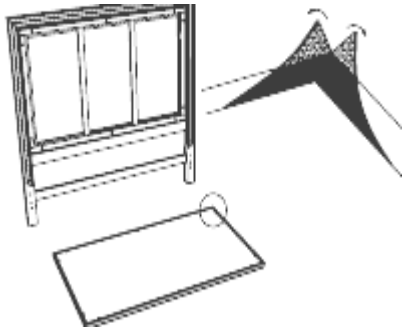


Figure 2

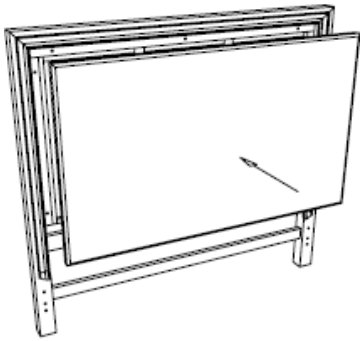


Figure 3

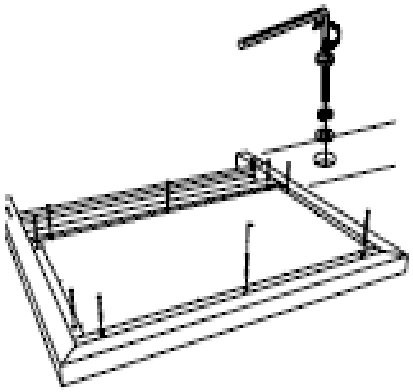


Figure 4

thank you for your purchase

stores | catalog | _www. potterybarn. com