POTTERYBARN

Vanity Panel Light Assembly Instructions

Important Safety Instructions:

- These instructions are provided for your safety. It is important that they are read carefully and completely before installing fixture.
- This product must be installed in accordance with the applicable installation codes by a person familiar with the construction and operation of the product and the hazards involved.
- This fixture has been rated for up to (4) 60-watt max. Type G bulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

WARNING: This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

Pre-assembly:

- For your safety and convenience, assembly by two people is recommended.
- Remove all parts and hardware from box along with any plastic protective packaging. Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Parts Included:

- (1) Mounting plate (A)
- (1) Fixture base (B)

Hardware included:


- (4) Metal anchors (C)
- (4) Screws (D)
- (2) Mounting screws (E)
- (6) Base screws (F)
- (1) Green ground screw (G)

To Install You Will Need:

- Phillips screwdriver/Flat screwdriver
- (3) Plastic wire connectors (Enclosed)

Installation Instructions:

- Remove mounting plate (A) from fixture base (B) by unscrewing base screws (F).
- Place mounting plate (A) on the ceiling outlet box; use it as a template, marked center point for four mounting holes of mounting pate (A) on the ceiling. Remove mounting plate (A).
- Drill small holes on the marked location, the holes should be big enough to accommodate with metal anchors (C). Push metal anchors (C) into the holes.
- 4. Gently pull the wires from the ceiling outlet and allow the wires to hang. Thread the wires through the center hole in mounting plate (A).
- 5. Affix mounting plate (A) to the ceiling by aligning mounting holes with center holes of metal anchors (C), inserting screws (D) into metal anchors (C) and inserting mounting screws (E) into ceiling outlet box to secure the mounting plate (A) to the ceiling.

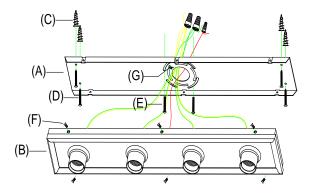

- 6. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED. If your outlet box DOES NOT has a GROUND WIRE, be sure to insert the green ground screw (I) into the mounting plate (A) facing DOWN, and wrap the fixture's bare copper ground wire around the ground screw on the mounting plate. If your outlet box has a GROUND WIRE (green or bare wire) attach this wire to the green GROUND WIRE of the fixture. Fasten with a plastic wire connector and wrap with electrical tape.
- 7. Carefully inspect the two fixture wires. One has white covering this is the NEUTRAL WIRE. The second wire's covering is black this is the HOT WIRE.
- 8. Connect the NEUTRAL WIRE from the fixture to the NEUTRAL JUNCTION BOX WIRE from the outlet box (usually white). Fasten each together with a plastic wire connector and wrap the connection with electrical tape. Be sure that no wire strands are exposed.
- Connect the HOT WIRE from the fixture to the HOT JUNCTION BOX WIRE from the outlet box (usually black). Fasten each together
 with a plastic wire connector and wrap the connection with electrical tape. Be sure that no wire strands are exposed. DO NOT
 REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED!
- 10. Attach fixture base (B) to mounting plate (A) by aligning the holes and inserting base screws (F). Tighten with a screwdriver.
- 11. Insert recommend light bulbs (not included) into sockets.
- 12. Restore power and test fixture.
- 13. Installation is complete.

Care Instructions:

- Wipe with dry cloth only.
- Avoid the use of all detergents and chemicals.