

P O T T E R Y B A R N

Lucy Delex Wall Storage Large White

Note: Professional installation required


- This hanging system is meant for drywall/stud mounting only.
- If walls are concrete, brick or plaster, please consult your local hardware store for assistance.

Important safety instructions:


Please read all instructions carefully before assembling. For your safety, mounting by two people is recommended.

The maximum individual shelf weight capacity is 20lbs (9.1KG). Do not exceed the load capacity.

Tool Required (Not Included):

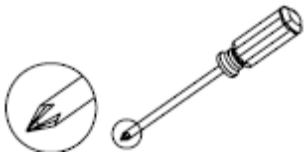

Phillips Head Screwdriver

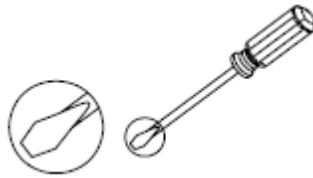


Flat head Screwdriver




Pencil

Parts Included:

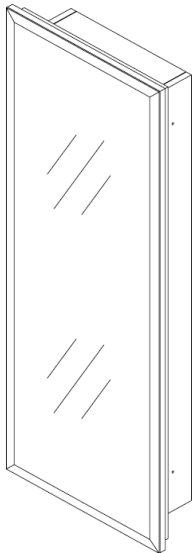

Wooden Cabinet (1pc) - A

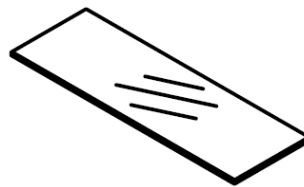

Glass Shelf (5pcs) -B

Hardware Included :



Shelf pin (20pcs) - a



Rubber Pad (2pcs) -b



Toggle Screw (4pcs) -c

Pre-Assembly:

- Remove all parts and hardware from the box and lay out on a clear workspace, along with any plastic protective packaging. Do not dispose of any contents until assembly is complete to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists above to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.

P O T T E R Y B A R N

Lucy Delex Wall Storage Large White

MOUNT CABINET TO THE WALL

Professional Mounting Instructions: See **Figure 1**

1. Mark the desired location on the wall for installation.

2. After verifying the recessed portion dimensions of cabinet, use appropriate tools to cut a rectangle in the wall covering (sheetrock) measuring approximately 39.38 cm (15.5 inches) wide and 112.27cm (44.2 inches) high. Use the level to make sure that the cutout is true and level.

Note to the professional installer: Once the sheetrock cutout is removed, it is likely that at least one wall stud will interfere with the inserted portion of this cabinet (A) and that some internal framing will be required. This will likely include cutting a section from the interfering stud and adding stud sections to ensure that there is wood support located adjacent each side of this cabinet (A) when it is inserted.

3. After the appropriate stud cutting and framing has been done, insert the cabinet (A) into the recess and ensure that it fits snugly and is true. Adjust and shim as necessary and make sure that the outer molding of cabinet (A) lies flush against the wall surface.

4. While holding the cabinet (A) firmly in the recess, insert toggle screws (c) into the holes located along the inside side panels of the cabinet (A). Using a Phillips head screwdriver, screw each of the toggle screws (c) into the adjacent wall studs or wood support structure until tight.

Note: Cabinet can be rotated to adjust door opening direction.

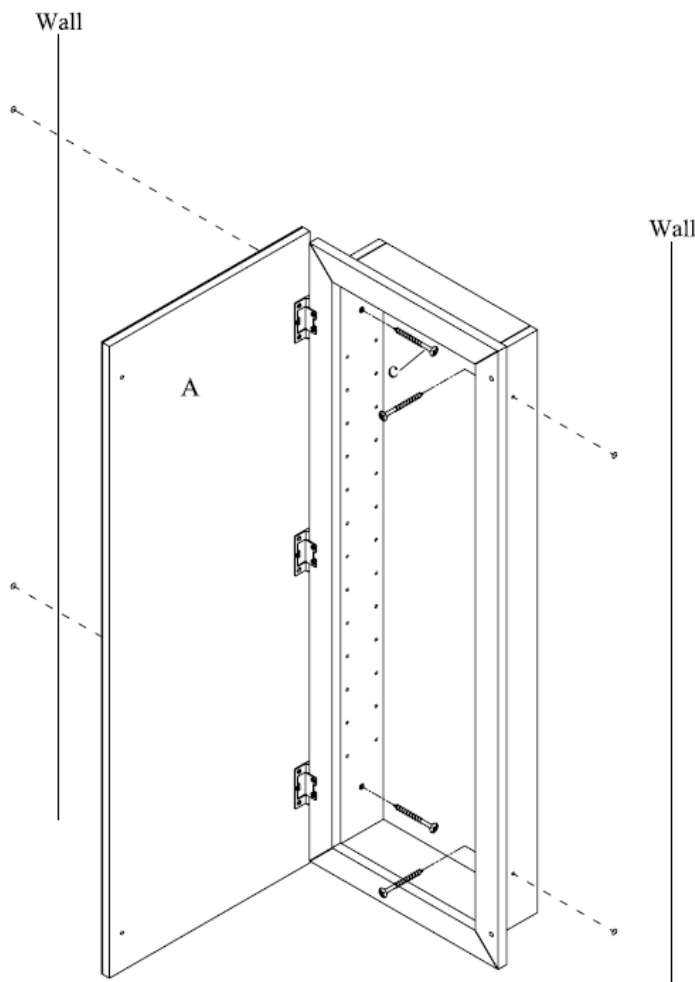


Figure 1



P O T T E R Y B A R N

Lucy Delex Wall Storage Large White

Assembly Instructions:

1. To install the shelf: insert the shelf pin (a) into the pre-drilled holes on the interior side of the wooden cabinet (A) to set each shelf at a desired level – FOUR per shelf. Once all four shelf pins (a) are in position, gently lay the glass shelf (B) onto the shelf pin (a). Repeat for the other shelf. **See Figure 2**
2. Attach the rubber pads (b) over the magnet in the wooden cabinet (A) (Optional). **See Figure 2**

Figure 2

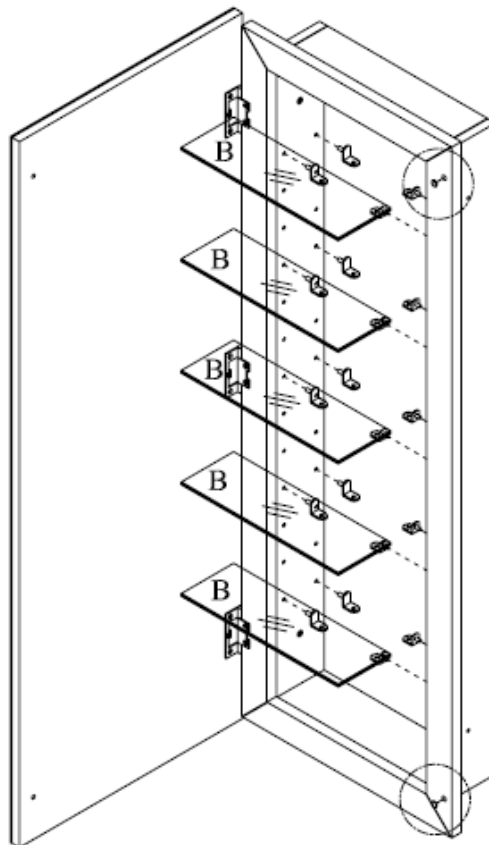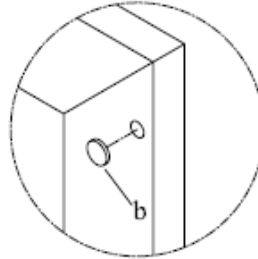

Care Instructions:

- ♦Wipe cabinet with a soft, dry cloth.
- ♦To protect the finish, avoid the use of all chemical and household cleaners and abrasives as they may damage finish

thank you for your purchase

Stores/catalog/www.potterybarn.com